



AU-X2O-DA

AU-X2I-DA

AU-U22-DA

AU-BT2-DA

Dante Update Instruction


Dante Update Instruction



Dante Firmware Update Manager

This upgrade require the use of legacy "Dante Firmware Update Manager" included in this update package. Following this update, units will be able to support the standard update procedures available through "Dante Controller" and "Dante Updater" when new updates are released.

Important: Before starting upgrade, open Dante Controller and make sure the unit to upgrade is an UltimoX2 chipset. Go to Device View in Dante Controller and select the unit to upgrade then select status tab. Verify the Dante Model to be UltimoX2.

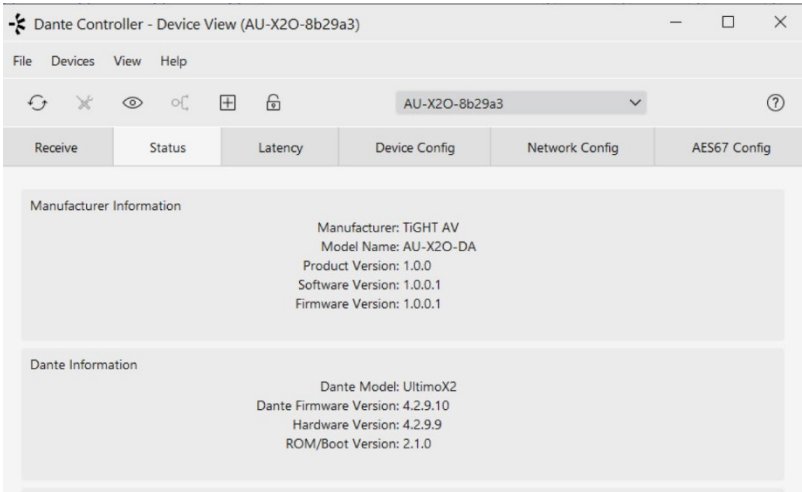


If you see UltimoX4 then contact TIGHT AV support at support@tightav.com to get the latest upgrades files for UltimoX4.

1. Locate the installation file for the "Firmware Update Manager" within the update package and proceed with the installation..


AU-U22-DA X2 TIGHT AV.dnt		2025-08-14 09:15
AU-X2I-DA X2 TIGHT AV.dnt		2025-07-07 12:46
AU-X2O-DA X2 TIGHT AV.dnt		2025-07-07 12:45
DanteFirmwareUpdateManager-3.10.11.1_windows		2024-09-28 12:47

Dante Update Instruction

2. Once installed, launch the software, select the network adapter corresponding to the dongles network, and click "Next".

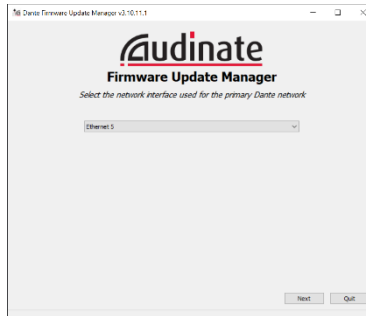


3. Choose the option "Update Dante Firmware" and click "Next".

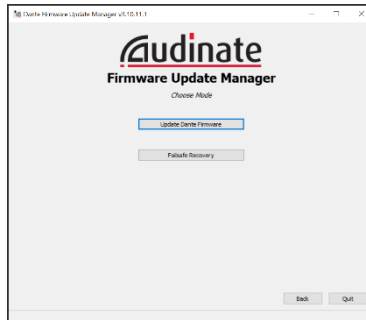


4. Navigate back to the update package, select the appropriate file for your dongle to perform the upgrade, and click "Next".
5. If the scan is not finding any matching units, press "Back" then tick the "Override Device Matching".

Dante Update Instruction

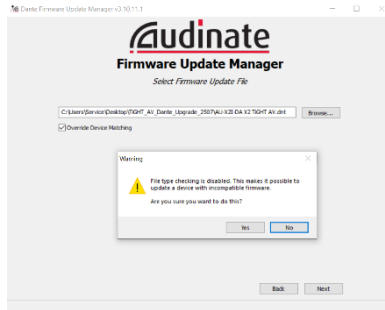

6. Select the units to upgrade and press "Start". **Be careful when selecting units and make sure it is the correct model!**

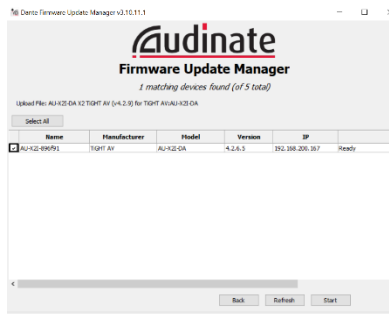

7. When finished open Dante Controller and reboot updated units manually under "Device View" and "Device Config".

